

Instructions for use

Congratulations on the purchase of the TOGU ball pump for plastic valve (1) and for rubber valve / needle-valves / lipped valve (2)

Inflating instructions:

Please always follow the instructions enclosed with the respective product, as there are different valves and pumps.

Observe the specified maximum dimensions, otherwise the material may be overstretched.

(1) Products with plastic-valves:

- The plastic nipple is already screwed on at the tip.
- Press the pump with the nipple onto the valve opening.
- Perform pumping movements with the handle.



(2) Products with rubber valve / needle-valves / lipped valve:

- The needle is in the handle!
- Instead of the plastic nipple, screw the needle onto the thread.
- Moisten the needle of the pump first.
- Then insert carefully and straight.
- Pump straight.



ATTENTION: For flat products, do not damage the opposite side with the needle.

Storage:

Do not expose to direct heat radiation.

Caution:

Before each use, check the product for damage to ensure safe handling. Observe the information on the maximum permissible load.