





Assembly Instruction

Item No.50761 White Kitchen-Dish Washer (Version-1)


Thank you for purchasing VIGA product. Please follow the instructions step by step in order to build the unit correctly.
Attention: Screws should be located and not tightened completely until the unit is constructed into a dish washer.

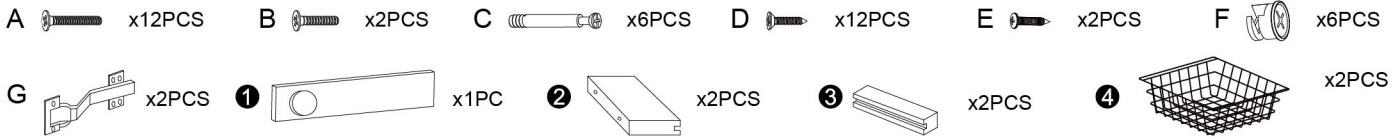


STEP 1

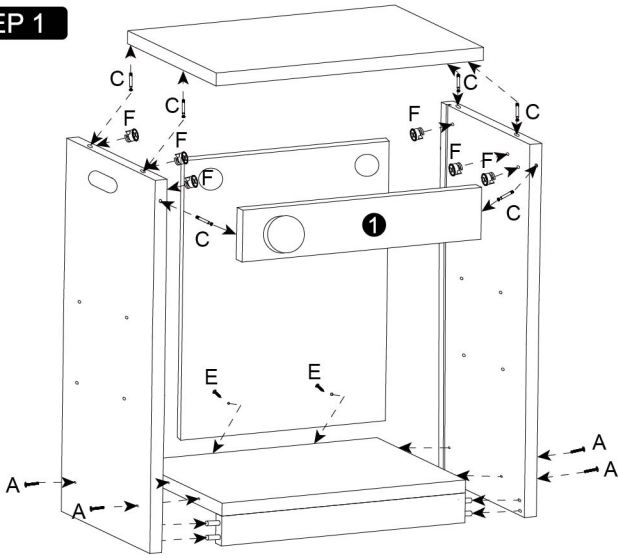


STEP 2

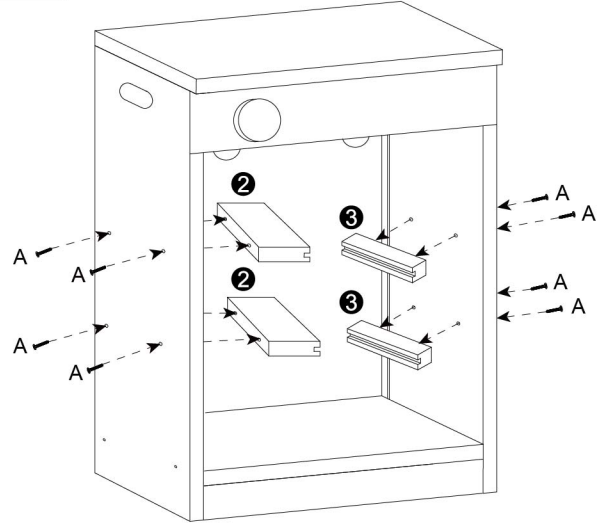

STEP 3

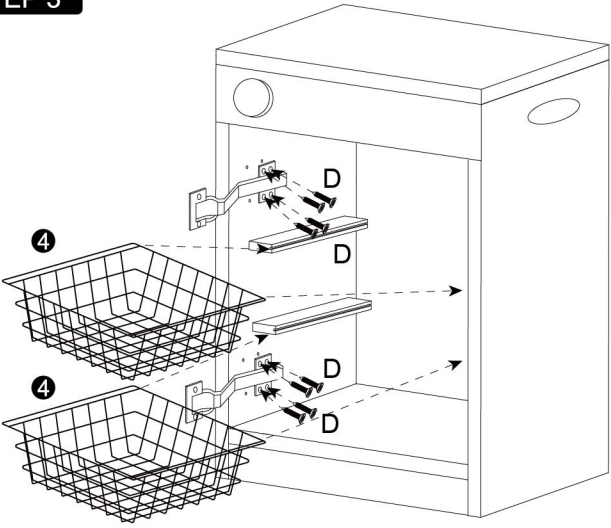

STEP 4

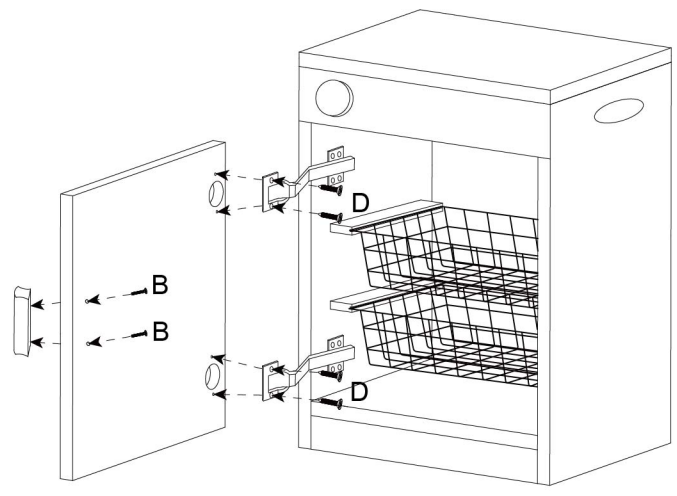

WARNING:

This toy is required to be assembled by adults only.
It may contain potential choking hazards, small parts or sharp points before assembly.
Incorrect assembly may cause injury to children.
Screws may rust over time, please inspect all the screws periodically.